











Permissible buckling load for channel profile MQ

• Flexural buckling certificate according to EN 1993-1-3: 2010 for C-Profiles (fully supporting cross-section)

									
Effective length Sk [cm]	MQ-21-F MQ-21- HDG plus [kN]	MQ-31-F HDG plus [kN]	MQ-41-F MQ-41- HDG plus [kN]	MQ-52-F MQ-52- HDG plus [kN]	MQ-72-F [kN]	MQ-21D-F MQ-21D- HDG plus [kN]	MQ-41D-F MQ-41D- HDG plus [kN]	MQ- 52-72D-F [kN]	MQ- 124XD-F [kN]
25	28.81	37.39	45.02	63.56	87.00	68.37	104.07	171.23	206.39
50	17.73	25.55	31.72	44.79	58.70	59.19	94.83	152.40	188.57
75	10.89	16.61	20.82	29.65	37.21	48.77	85.04	132.18	169.79
100	7.38	11.64	14.50	20.96	25.52	38.04	74.24	110.90	149.12
125	5.36	8.81	10.92	16.04	19.10	28.96	62.93	90.99	127.29
150	4.08	7.03	8.73	13.03	15.27	22.21	52.23	74.40	106.36
175	3.21	5.80	7.28	11.04	12.79	17.36	43.04	61.37	88.10
200	2.59	4.90	6.26	9.63	11.07	13.86	35.59	51.29	73.11
225	2.12	4.21	5.49	8.56	9.80	11.29	29.68	43.44	61.13
250	1.77	3.66	4.88	7.72	8.83	9.36	25.02	37.23	51.61
275	1.50	3.20	4.39	7.03	8.05	7.88	21.32	32.25	44.03
300	1.29	2.83	3.98	6.44	7.41	6.72	18.35	28.19	37.94

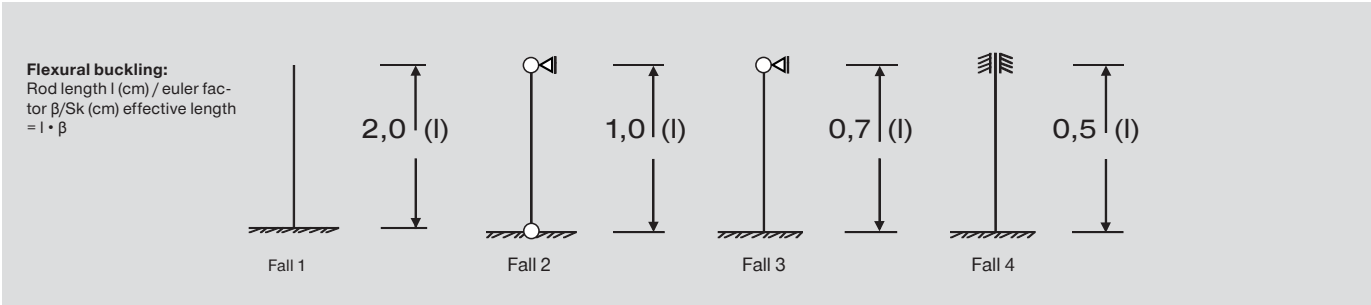

- $\gamma_{\text{Red}} = 1,4 \rightarrow F_{\text{D}}^* = \text{permissible buckling load } 1,4 \cdot (\text{design value})$
- Bend table is only valid for centric buckling loads. The values in this table aren't allowed for offset torque/oblique position/lateral-torsional buckling and must be engineered.